


Electric Room Heater Operating Instruction.

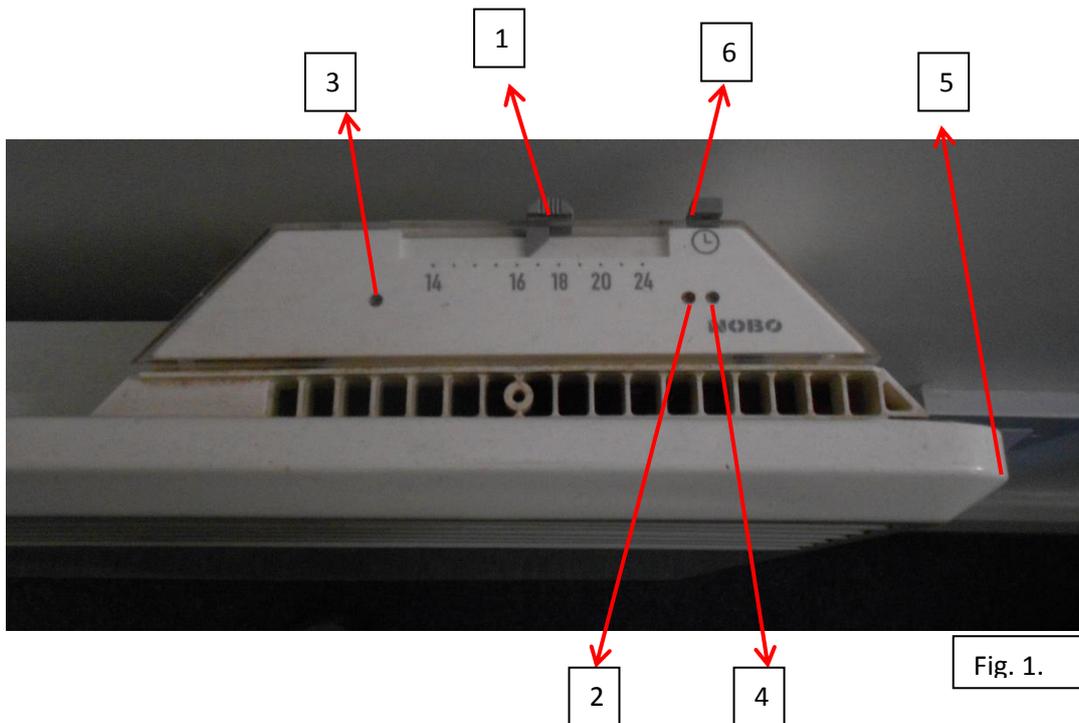

Key to Fig. 1.
1- Temperature adjustment
2- Red, comfort mode
indicator light
3- Green, Economy mode
power indicator light
4- Yellow, temperature
operating indicator light
5- On/Off switch – 1= ON,
0= OFF
6- Boost timer button



There is an On/Off switch on the wall next to the heater. Make sure this is turned on with the red tab showing.



There is also an ON/OFF switch on the top right hand corner of the heater. 5
Make sure this is turned to 1.

When the green indicator light 3 is ON, heater operates on frost protection mode. Press the timer button gently forward. 6 This will bring on the red and yellow indicator lights. 2 4

The heater will now operate for up to two hours.

Now set the temperature slider switch 1 to the desired temperature and repress the timer button to operate the heater.

If you do not repress the timer button the heater will only turn on if the temperature goes below 11°C. After that it will go on frost protection again until timer button is operated.

If you are having problems with your heater, please report it to the main reception. We will deal with it as quickly as possible or phone the helpdesk on 0115 9518670.

Radiator Operating Instruction.





Temperature setting.

To operate the radiator turn the temperature setting dial to the required temperature.

The higher the number setting the hotter the heater will get.

If you cannot move the dial, ask at reception and someone will help you as soon as possible.

Storage Heater Operating Instruction.

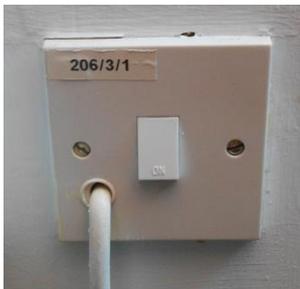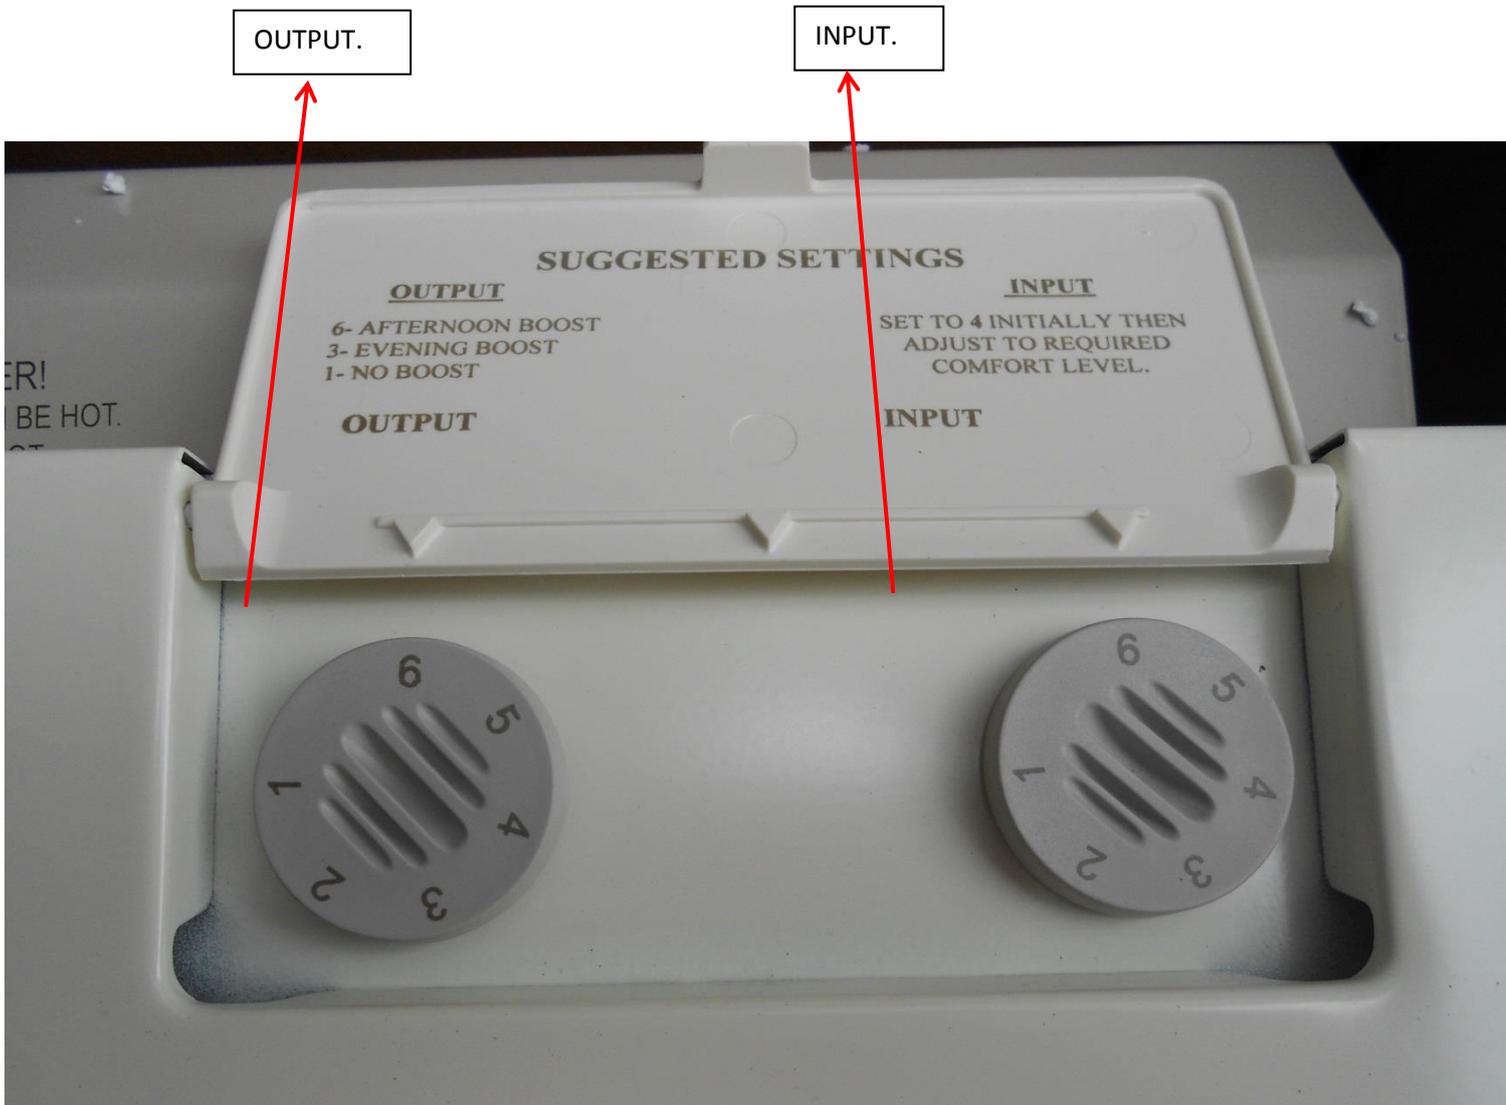

There is an ON/OFF switch located on the wall. Always leave the wall switch on as the heater may take 24 hours or overnight to operate.

**BROADGATE
PARK**

The place to be

Input- This dial is initially set to the midway position. Alter this dial as desired.

Output- Moving this dial from minimum to maximum will mean the heat will be discharged more quickly. If the dial is set to the midway point then the heat will discharge evenly throughout the day time.

If the dial is set to maximum the heat will discharge very quickly.

If you cannot move the dials, ask at reception and someone will set these for you as soon as possible.